


Air Conditioning Remote Controller (Weekly timer settings)

Names and Functions of Display and Keys

Pull the cover downward to open it.

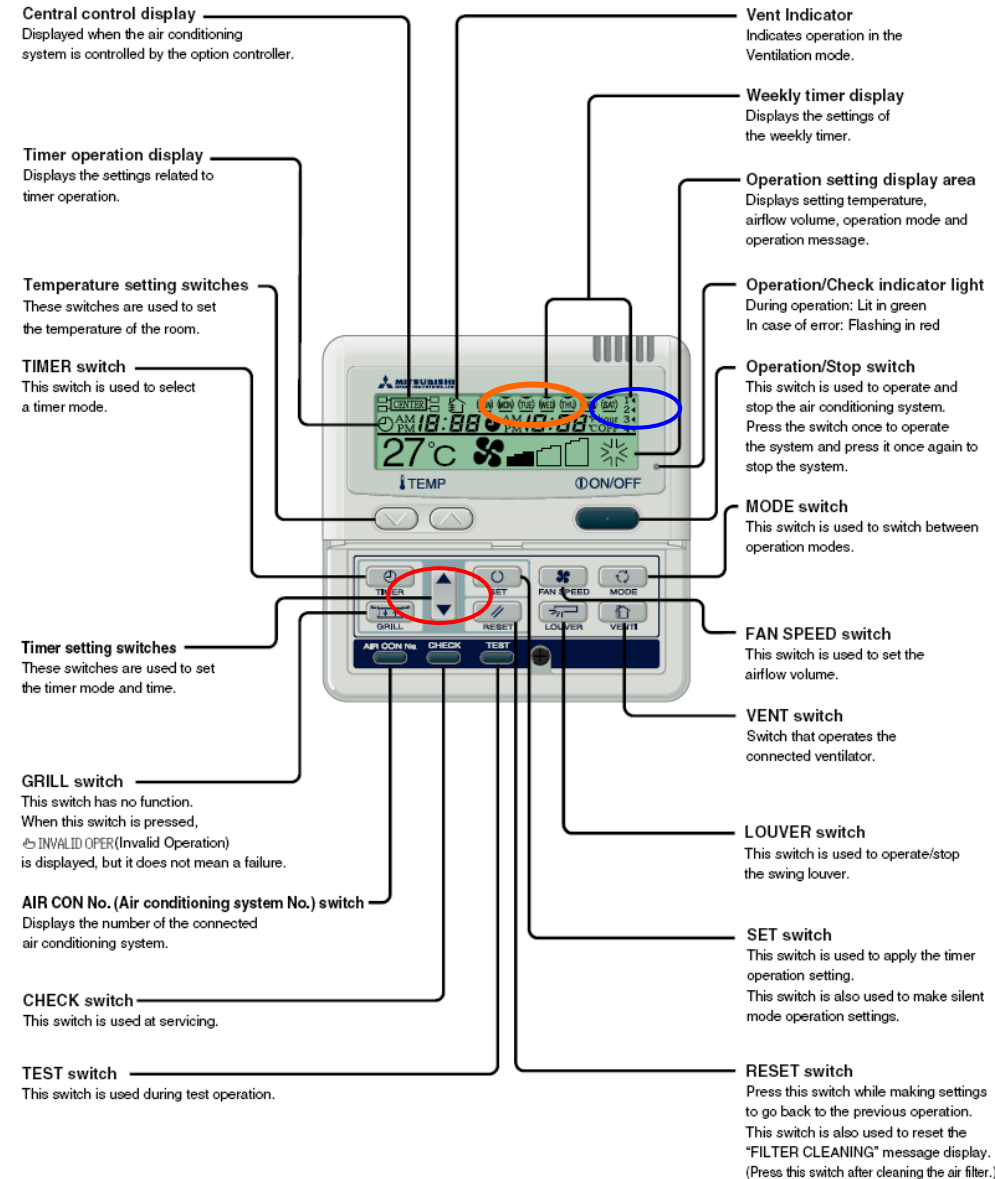

*If you press any of the switches above and "INVALID OPER" is display, the switch has no function. But it does not mean a failure.

Setting Current Time and Day

- 1) Press "ON/OFF" to start the Air Con unit, if not already running.
- 2) Press "TIMER" key, when "CLOCK SET" appears press "SET".
- 3) When "DAY SET" appears, press Timer Setting Switch "▲ or ▼" until, above today appears a "▼", then press "SET".
- 4) When "TIMER SET" appears press "▲ or ▼" to set current time. Press "SET".
(One press = 1 min, press and hold time jumps in 10 min steps.)
- 5) Display will show "CLOCK SET OK" now press "ON/OFF" once.
- 6) Time and Day setting is now complete.

Setting the Time Clock (days with different times)

- 1) Press "TIMER" key, when "CLOCK SET" appears press "▼" 4 times.
- 2) When "WEEKLY TIMER" appears press "SET" twice.
- 3) When "DAY SET" is displayed press "▲ or ▼" to place a "▼" above the day(s) to be set. Press "SET".
(Note, scrolls Mon thro' Sun then Mon to Fri, then Sun to Sat in blocks.)
- 4) When "SELECT No" and "I ◀" (top right corner) appears, press "SET".
- 5) When "ON TIMER" appears, press "SET" again,
- 6) When "TIMER SET" appears press "▲ or ▼" to set the required time. Press "SET".
- 7) Press "SET" twice wait 2 seconds and press "SET" again, when "SELECT No" appears press "▼" to move to "2 ◀". Press "SET".
- 8) When "OFF TIMER" appears press "SET". Repeat step 6) above.
- 9) Press "SET", when "SELECT No" appears press "▼" when "DAY SET" appears press "SET".
- 10) Repeat steps 3) to 9) above, for each day or block of days to be set.
- 11) On completion press "ON/OFF". The display will show "▼" above today and "◡" an underline for each day with a timer setting.

The next timed event to occur will be displayed with the time and a ☀ light clock for ON and a dark clock symbol for OFF.

To cancel a Timer setting. Press "TIMER", then "▼" 5 times when "TIMER CANCEL" appears, press "SET" then "▼" 3 times, press "SET" twice, finally press "ON/OFF".

For further information consult the User's Manual.